

TROUBLESHOOTING & OPERATION NOTES


- 1) If the scale does not perform accurately, please recalibrate as outlined in the manual.
- 2) If the Display ever becomes locked on EEEEE, this indicates that the scale was shocked, dropped or otherwise damaged and the delicate weighing sensors have been damaged. You can try recalibrating the scale (If the sensor has not been hurt too badly it may work again after recalibration). Otherwise you will have to follow the warranty instructions that came with your scale.
- 3) If the display becomes locked on 8888, this often indicates low power. However sometimes it also may indicate a serious zero mark error. This means when you turn the scale on, it can't determine what zero is (a slight zero mark error will cause situation #1 above) Thus, if new batteries do not fix this error please follow the warranty instructions.
- 4) If the display shows UNST, this means the scale is not stable. Try operating the scale on a more stable surface & be sure nothing is on the tray or stuck under the tray when you turn it on. If the problem persists, it may be an indication of fatal sensor damage.
- 5) If the scale is on AC power and it will not properly stabilize (fluctuating weights are shown on the display), this may be caused by a malfunctioning AC adaptor. Please try operating the scale on Battery power to see if the problem persists. If the problem does not occur on Battery power then it is a sign of a bad or improper AC adaptor. Please replace the AC adaptor. If the problem occurs on Battery power also, it may be a sign of environmental issues, please the special warning in this manual.

Although the ULTRASHIP is designed to be extremely durable, It's important that you never overload or drop/shock the scale. If you ship the scale be certain to pack it extremely well to prevent shipping damage. Scales are delicate instruments and unlike Cellular phones, scales have delicate sensors that determine how much an item weighs. If you drop or shock your scale, these sensors "feel" the shock and are sometimes destroyed. This happens with all digital scales. We design our scales to be as resistant to shock or drops as possible, however there is no way for us to protect 100% against load cell or sensor damage. A well-treated scale will provide years of reliable and accurate weighing. However an abused scale will only work until it's sensors are damaged.

POSTAL SCALE

My Weigh UltraShip

INSTRUCTION MANUAL

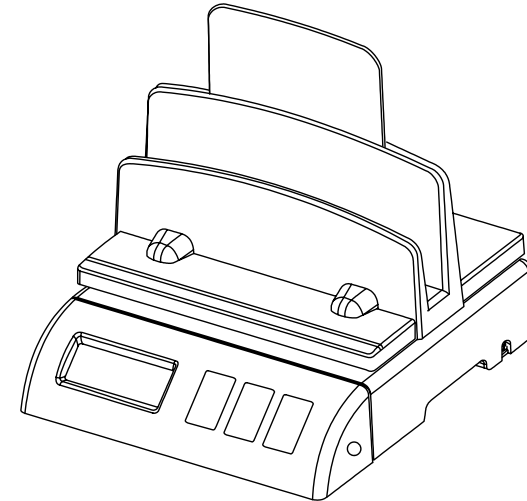

SAFETY PRECAUTIONS

All safety messages are identified by the words "WARNING" and "CAUTION". These words mean the following:

△WARNING	Important information to alert you to a situation that might cause serious injury and damage to your property if instructions are not followed.
△CAUTION	Important information that tells how to prevent damage to the equipment.

When using the scale, the following safety precautions should always be followed.

△ WARNING

Use only the correct AC adaptor with the scale. Other adaptors may cause permanent electrical damage.

△ CAUTION

Avoid placing the scale in direct sunlight, this may cause discoloration or malfunction.

Replace all batteries at the same time – Do not replace only a portion of the 4 batteries as this may cause a malfunction.

If the scale is not to be used for a long period of time, remove all batteries from the battery compartment to avoid leakage, which may cause damage to this scale.

Avoid overloading the scale, as this may cause permanent damage and void your warranty – do not EVER exceed the maximum capacity of the scale

Keep the scale away from water – this scale is not water resistant. Shock, injury and electrical damage can occur if used in a wet location!

Matter charged with static electricity could affect accuracy. Discharge all static electricity. For example, one method is to use Static-Guard spray, and spray it on both sides of the weighing platform.

SPECIFICATIONS

Model UL-30	Capacity 30.9lb/14kg	Division 2g/0.1oz Division 5g/0.2oz
Model UL-50	Capacity 50.9lb/22.5kg	Division 2g/0.1oz Division 10g/0.5oz
Platter / Tray	160×203mm	
Net/gross weight	750/950g	
Package	Standard carton: 28×26×10.5(cm ³)	
Operating Temperature	Optimum: 15-30c (62-90f)	
Power source	4×R14C Size Batteries or AC/DC	
	Adapter 7.5V/100mA (optional)	

SPECIAL WARNING

Cell-Phones, Cordless-Phones, and any radio-frequency device can cause temporary interference and cause the scale to temporarily not work properly. Please do not use any electronic device near the scale. Just like in an Airplane, do not use your cell-phone near the scale when it is in use. While there is NO risk of permanent damage to the scale, interference can cause an incorrect calibration or incorrect weight readings.

CALIBRATION

When to calibrate - calibration is almost never required.

If the scale is inaccurate, calibration may be desired when the scale is first set up for use, or if the scale is moved to a different altitude or gravitation. This is necessary because the weight of a mass in one location is not necessarily the same in another location. Also, with time and use, mechanical deviations can occur.

How to calibrate

The UL-30 requires a 10kg calibration weight to calibrate. The UL-50 requires a 20kg calibration weight. (you can use a combination of weights such as 5 2kg weights)


1. **The scale must be powered OFF.** Press and hold [ZERO] first, then Press [ON/OFF] while keeping the [ZERO] button depressed, then release both keys. The display will show the A/D value (a series of random numbers).
2. Wait for the stable A/D value to be displayed, Press [UNIT] the display will show "0SAVE", then the display will return to the random A/D value.
3. Place the 10kg (UL-30) or 20kg (UL-50) weight(s) on platform. Wait for the stable A/D value to display, then press [UNIT], the display will show "0SAVE". Calibration is complete, remove the weight(s).
4. Turn the scale OFF (Press the ON/OFF key), then turn it back ON and check some weight readings. If calibration is still incorrect, repeat calibration but try it more slowly.

If calibration is repeatedly incorrect then: 1) Replace the batteries, 2) Try a more stable surface or vibration and interference free location, 3) Be sure there is no static electricity on the scale (use an anti-static spray to remove static electricity)

FEATURES

- Auto shut off (adjustable)
- Auto calibration
- Auto zero tracking
- AC Power (optional)
- Removable display w/3ft cord
- kg /lb /lb:oz /g conversion
- Large LCD (6digits 15 mm high)
- hold function
- Large square weighing tray with multiple attachments

PARTS DESCRIPTION

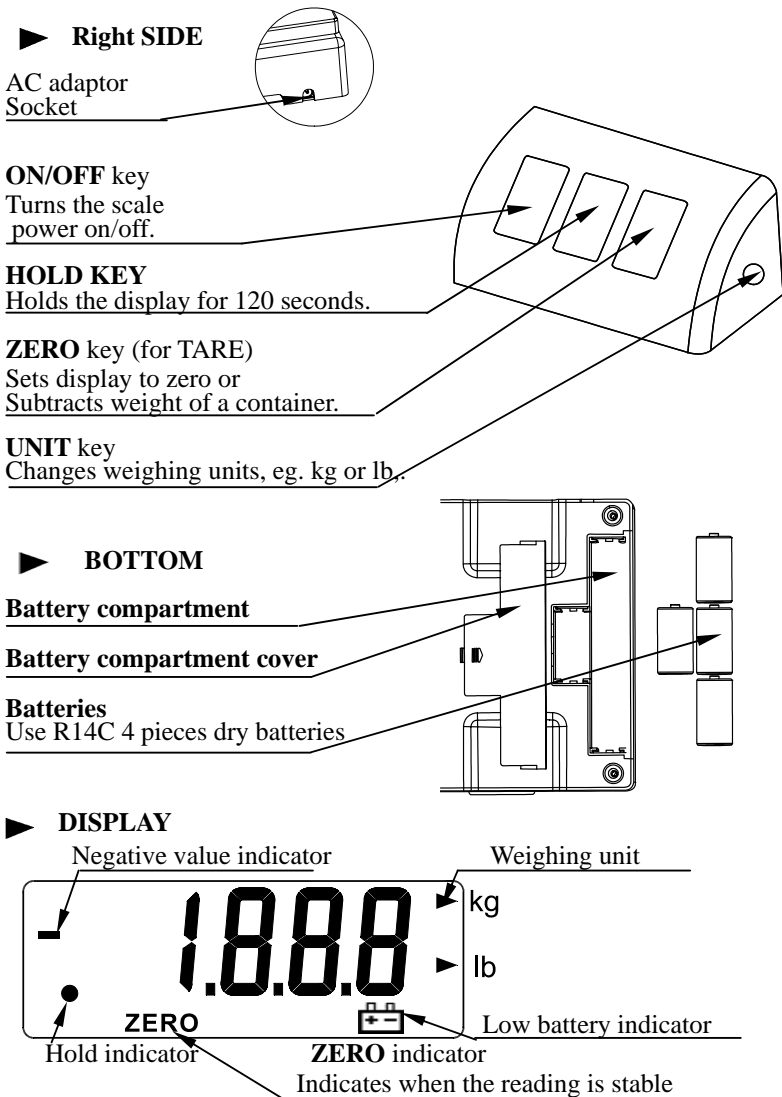

HOLD FUNCTION

Once the hold key is pressed, the weight will remain on the display for 120 seconds after the item has been removed from the scale so the weight can easily be read.

- 1) Place the item on the scales platform.
- 2) Wait for the stable weight to be displayed.
- 3) Press the hold key. The “.” hold indicator will turn-on.
- 4) Remove the item from the scale platform. The item’s weight reading will remain on the display for 120 seconds.
- 5) End the hold function: Once an item is weighed and the hold function is enabled; you may want to end the hold function, Press the hold key again to cancel the “.” hold indicator and return the scale normal mode.

AUTO-OFF FUNCTION SETTINGS

To enable or disable the auto-off feature follow these directions:

1. Start with the power off (the power must be OFF). Press and hold the **[Hold]** key first, then press **[ON/OFF]**, then release both keys. The display will show **A_ON** or **A_OFF**.
2. Selection of auto shut off mode.
Press the **[Hold]** key, the display will show **A_ON** or **A_OFF**. **A_ON** means the auto shut off function is active. Press **[Hold]** again, the display will show **A_OFF**, this means the auto shut off function is inactive.
3. Return to weighing mode.
Press [ON/OFF] to turn the power off, press [ON/OFF] again to turn on the power and the scale will return to weighing mode.

WEIGHING

Before weighing

Whenever possible, please allow the scale to warm up for several seconds after first turning the power on so that the scale will function properly and accurately.

Error messages

EEEE: Overload

: Low battery

Weighing procedures

1. Press [ON/OFF] to turn on the scale.

When the power is turned on, all display segments appear for a few seconds and "0" will appear on the display.

2. Select the weighing unit with [UNIT].

Press **[UNIT]** to select a weighing unit "kg", "lb", "lb/oz", or "g"

Once the unit has been selected, the selected unit will be displayed next to the weight value.

3. Start weighing

If you do not use a container for weighing,

Verify the reading is "0". If not, press **[TARE]** to display "0".

Place the items to be weighed on the platform.

When the reading becomes stable, the stable indicator is displayed.

If you use a container for weighing,

Place an empty container on the platform.

Wait for the stability indicator to be displayed and press **[TARE]**.

Place the objects to be weighed in the container.

When the reading becomes stable, the stable indicator is displayed.